


ENSURE YOUR WEAPON IS NOT LOADED PRIOR TO HANDLING

1) - Ensure that the weapon is not loaded prior to working on your weapon.

2) - Thread the FSC556 on the rifle until it is hand tight. Determine the amount of rotation needed to align the device correctly taking into consideration that the difference between hand tight and wrench tight is approx. 20 to 30 degrees.

3) - Using the enclosed shim set and following the instructions on the shim set packaging, install the FSC556 accordingly.

4) - The installation is correct when the device is wrench tight and the PWS symbol is in on top when shooting the rifle.

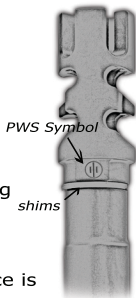

Note: the PWS Symbol should be on top / 12 o'clock position.

For more information on this and our other products, visit our website at:
www.primaryweapons.com

Primary Weapons Systems
800 E Citation Court
Suite E
Boise, ID 83716